


240V LOAD CONTROL RELAY INSTALLATION INSTRUCTION SHEET

FIGURE 1

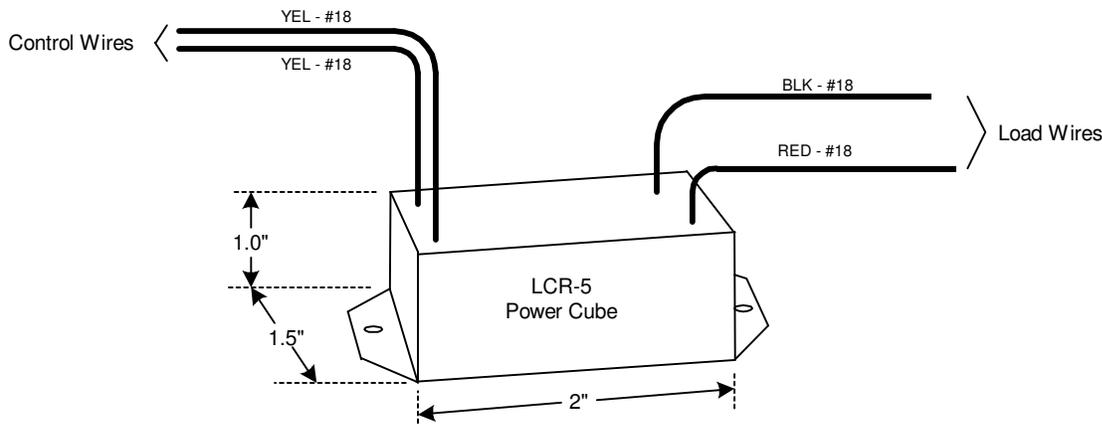


MOUNTING POSITION - The LCR-5 can be mounted in any position. The LCR-5's epoxy-potted design allows nearly any mounting configuration required. It is intended to be mounted inside a meter enclosure where it will not be directly exposed to the weather. The 2" x 1.5" x 1" form factor of the LCR-5 makes it ideal for mounting inside a tight meter enclosure with a high level of electrical insulation. The LCR-5 should be mounted or positioned such that the bottom side of the LCR-5 is up against and flush with an inside wall of the enclosure that does not get direct sunlight. This will assist with heat dissipation of the solid state switching element for a loads approaching the 1 amp rating. Two mounting tabs are provided for secure mounting.

POWER INPUT - The LCR-5 is powered from the load wires and does not require any separate power supply. Connect the LCR-5 as shown in Figure 2 wiring diagram.

METER CONNECTIONS (INPUT) - The LCR-5 has a dry-contact input meaning that the control input wires simply need to be connected or disconnected to each other to switch the load on and off. Connect the LCR-5's control input leads (YEL) to the meter's dry contact output terminals. There is no polarity. Either yellow wire may be connected to either terminal of the meter's dry-contact output switch. This switch **MUST** be isolated. The nominal control voltage is suitable for meter dry-contact outputs rated for 120VAC.

LOAD CONNECTIONS (OUTPUT) - The relay's output is a solid state TRIAC type switch between the BLK and RED #18AWG wires. This relay contact is inserted in series with one side of the load to be controlled as shown in Figure 2. The relay output is rated up to 1 Amp at any AC voltage of 240 volts. The contact is normally-open (NO) and is intended to be inserted into a control circuit or load circuit up to 1 Amp.



OPERATION - Upon the closure between the yellow wires, the power relay's contacts will close. When continuity between the yellow wires is broken, the relay's contacts will open.

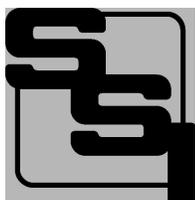

SOLID STATE INSTRUMENTS

a division of Brayden Automation Corp.
6230 Aviation Circle, Loveland, Colorado 80538
Phone: (970)461-9600 Fax: (970)461-9605
E-mail: support@solidstateinstruments.com

FIGURE 2: LCR-5 Wiring Diagram

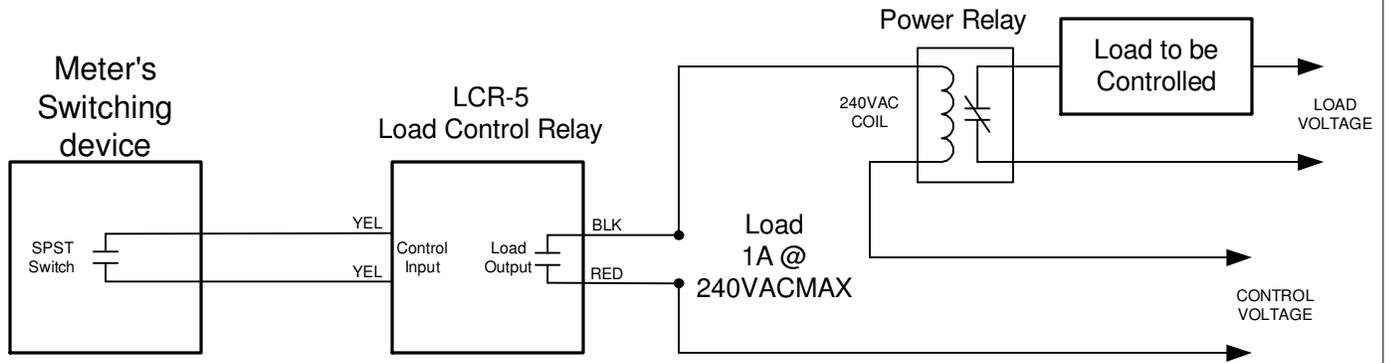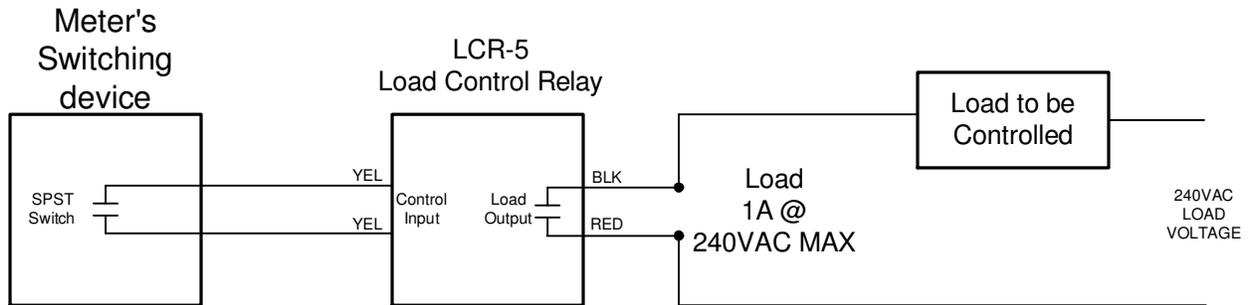

LCR-5 Load Control Relay Wiring Diagram		REVISIONS	
		NO.	DATE
DATE ORIGINAL	SCALE		
1/2/2013	N/A		
LATEST REVISION	JOB NO.	CHECKED	DRAWN
			WHB

**Brayden Automation Corp./
Solid State Instruments div.**
6230 Aviation Circle
Loveland, CO 80538
(970)461-9600
(970)461-9205 fax
www.solidstateinstruments.com